 


Watch N' Learn

 
OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Watch N' Learn can help teach your child how to tell the time as well as the alphabet. At the touch of a button, your child can see each letter, see a picture of a word that starts with that letter, and hear how that letter and word should be pronounced.

The watch is shipped in a battery-saving mode. Use a pointed object (such as a straightened paper clip) to press the reset button. **Watch N' Learn** appears. Then the clock face and time appear.

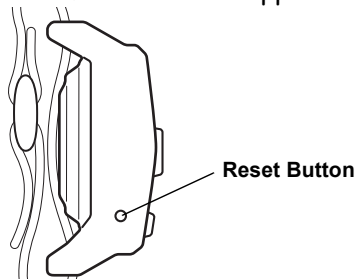

SETTING THE TIME

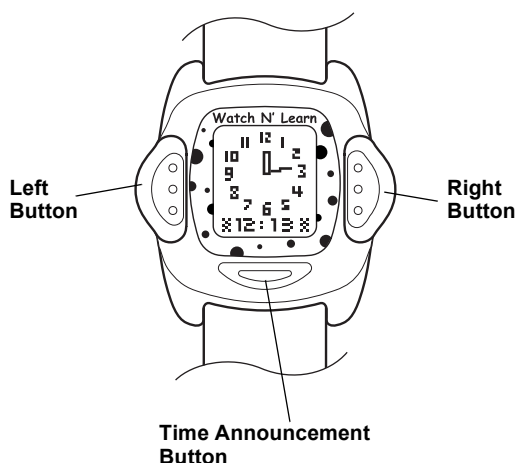

Note: If you do not press any buttons in the time-setting mode for about five seconds, the clock stores the current setting.

1. Press both the left and right buttons simultaneously when the clock face appears. The hour digits flash.
2. Repeatedly press the left or right buttons to set the hour digits.

Note: **PM** appears for PM hours.

3. Press both the left and right buttons simultaneously again. The minute digits flash.

4. Repeatedly press the left or right buttons to set the minute digits.

To view and hear the current time at any time, press the time announcement button. The watch announces the current time and tells you what they are doing now.

Learning the Alphabet

Note: If you do not press any button for about five seconds, the watch returns to the clock display.

Press either the left or right button. A letter appears on the display, and the watch pronounces the letter. Then a picture of a word that begins with that letter appears. The watch pronounces the word. Repeatedly press either the left or right button advance to another letter of the alphabet.

Press the time announcement button to return to the clock display and hear the current time.

RESETTING THE WATCH

If the watch stops operating properly, use a pointed object (such as a straightened paper clip) to press reset.

REPLACING THE BATTERY

 
Your Watch N' Learn comes with one CR 2032 button-cell battery for power. When the display dims, the sound becomes weak or distorted, or the watch stops operating properly, replace the battery. For the best performance and longest life, we recommend a RadioShack battery.

Warnings:

- Keep button-cell batteries out of reach of children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: Use only a fresh battery of the required size and recommended type.

Follow these steps to replace the battery.

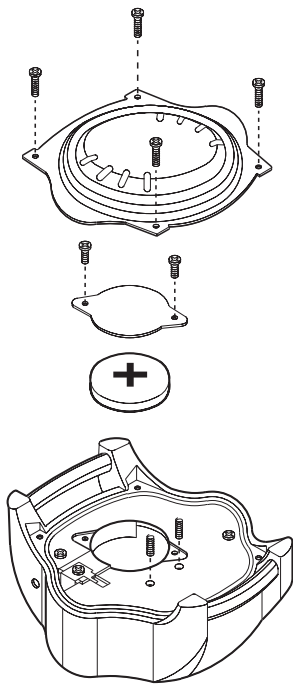

1. Remove the watch's band.
2. Use a small Phillips screwdriver to remove the screws from the battery compartment's cover, then remove the cover.
3. Use the screwdriver to remove the two screws from the transparent slip inside the compartment and remove the slip.
4. Remove the old battery, and put a new one in the compartment with the positive side (+) facing up.
5. Replace the slip and secure it with its screws.

Notes:

- Be sure the rubber seal around the battery compartment is correctly positioned before securing the cover.
- Make sure the two removable springs are correctly positioned and are flush with the metal surface before securing the cover with screws.

6. Replace the cover and secure it with its screws.
7. Replace the watch's band.

Caution: If you do not use the watch for several weeks or more, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

CARE

To enjoy your Watch N' Learn for a long time:

- Keep the watch dry. If it gets wet, wipe it dry immediately.
- Use and store the watch only in normal temperature environments.
- Handle the watch gently and carefully. Do not drop it.
- Keep the watch away from dust and dirt.
- Wipe the watch with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99